Hands-on Lab: Monitoring a DAG



Estimated time needed: 20 minutes

In this lab, you will work with the Airflow Web UI and CLi to explore the DAGs further. You will be exposed to using the interactive tools to search for DAGs, introduces to various views of the DAGS and how you can use this to explore the DAG workflow, the individual tasks in the workflow and view the outcome of the tasks.

After completing this lab you will be able to:

- · Search for a DAG
- · Pause/Unpause a DAG
- Get the Details of a DAG
- Explore grid view of a DAG
- Explore graph view of a DAGExplore Calendar view of a DAG
- Explore Task Duration view of a DAG
- Explore Details view of a DAG
- View the source code of a DAG
- Delete a DAG

About Skills Network Cloud IDE


Skills Network Cloud IDE (based on Theia and Docker) provides an environment for hands on labs for course and project related labs. Theia is an open source IDE (Integrated Development Environment), that can be run on desktop or on the cloud. to complete this lab, we will be using the Cloud IDE based on Theia running in a Docker container.

Important notice about this lab environment


Please be aware that sessions for this lab environment are not persistent. A new environment is created for you every time you connect to this lab. Any data you may have saved in an earlier session will get lost. To avoid losing your data, please plan to complete these labs in a single session.

Exercise 1: Start Apache Airflow

- 1. Click on Skills Network Toolbox.
- 2. From the BIG DATA section, click Apache Airflow.
- 3. Click Start to start the Apache Airflow

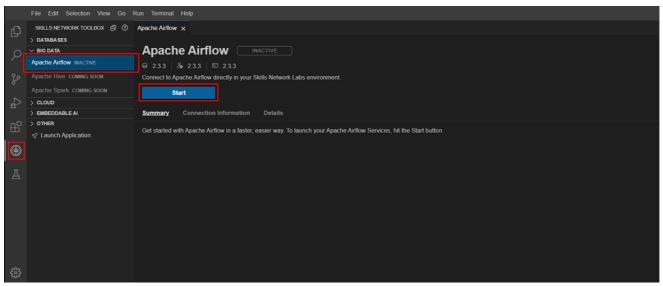


Note: Please be patient, it will take a few minutes for Airflow to get started.

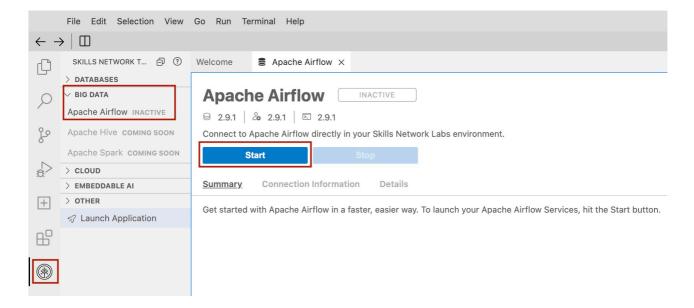


Exercise 2: Open the Airflow Web UI

When Airflow starts successfully, you should see an output similar to the one below. Once Apache Airflow has started, click on the highlighted icon to open Apache Airflow Web UI in the new window

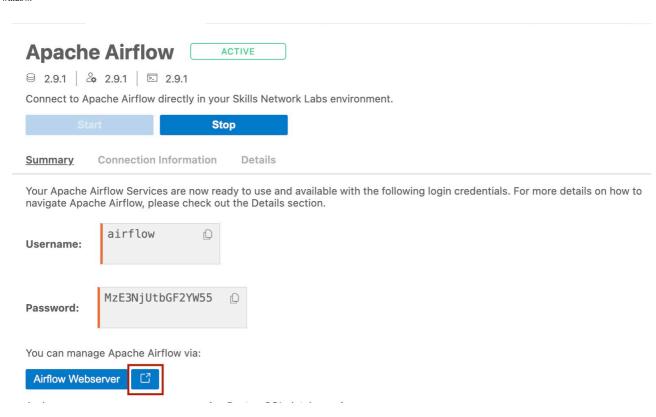

You should land at a page that looks like this.

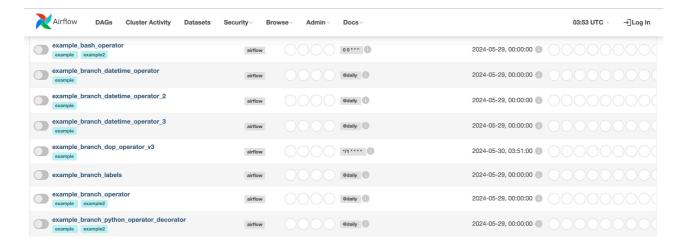

Exercise 3: Submit a dummy DAG

For the purpose of monitoring, let's create a dummy DAG with three tasks.

- Task1 does nothing but sleep for 1 second.
- Task2 sleeps for 2 seconds.
- Task3 sleeps for 3 seconds.

This DAG is scheduled to run every 1 minute.

- 1. Using Menu->File->New File create a new file named $dummy_dag.py$.
- 2. Copy and paste the code below into it and save the file.

```
# import the libraries
from datetime import timedelta
# The DAG object; we'll need this to instantiate a DAG
from airflow import DAG
# Operators; we need this to write tasks!
from airflow.operators.bash.operator import BashOperator
# This makes scheduling easy
from airflow.utils.dates import days_ago
#defining DAG arguments
# You can override them on a per-task basis during operator initialization
default_args = {
    'owner': 'Your name',
    'start_date': days_ago(0),
    'email': ['your email'],
    'retries': 1,
    'retry_delay': timedelta(minutes=5),
}
# defining the DAG
dag = DAG(
    'dummy_dag',
    default_args_edefault_args,
    description='My first DAG',
    schedule_interval=timedelta(minutes=1),
)
# define the tasks
# define the first task
task1 = BashOperator(
    task_id='task1',
    bash_command='sleep 1',
    dag=dag,
)
# define the second task
task2 = BashOperator(
    task_id='task2',
    bash_command='sleep 2',
    dag=dag,
)
# define the third task
task3 = BashOperator(
    task_id='task3',
    bash_command='sleep 3',
    dag=dag,
)
# task pipeline
task1 >> task2 >> task3
```

3. Set the AIRFLOW_HOME directory.

export AIRFLOW_HOME=/home/project/airflow

- 4. Submitting a DAG is as simple as copying the DAG python file into dags folder in the AIRFLOW_HOME directory. Open a terminal and run the command below to submit the DAG.
 - cp dummy_dag.py \$AIRFLOW_HOME/dags
- 5. Verify that our DAG actually got submitted. Run the command below to list out all the existing DAGs.

airflow dags list

6. Verify that dummy_dag is a part of the output.


airflow dags list | grep dummy_dag

7. Run the command below to list out all the tasks in $dummy_dag$.

airflow tasks list dummy_dag


You should see 3 tasks in the output.

1. In the Web-UI, identify the Search DAGs text box as shown in the image below and type dummy_dag in the textbox and press enter.

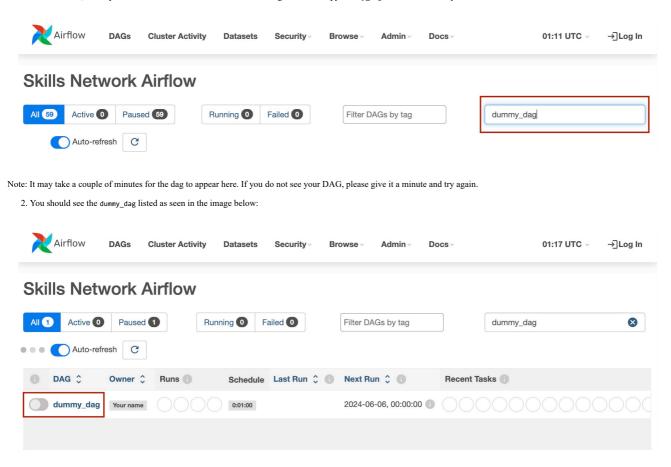


Exercise 5: Pause/Unpause a DAG

1. Unpause the DAG using the Pause/Unpause button.

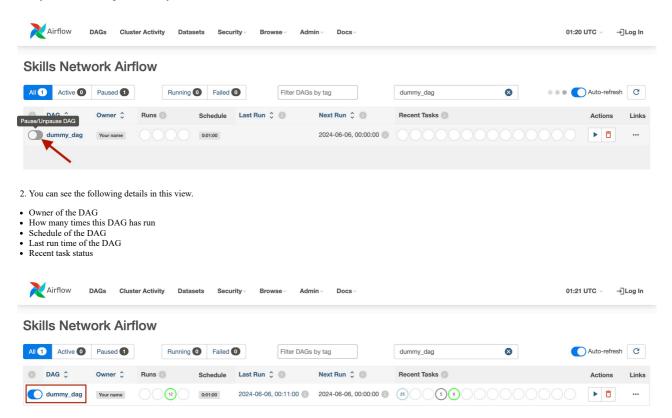


Exercise 6: Detailed view of a DAG

 $1. \ Click \ on the \ DAG \ name \ as \ shown \ in \ the \ image \ below \ to \ see \ the \ detailed \ view \ of \ the \ DAG.$

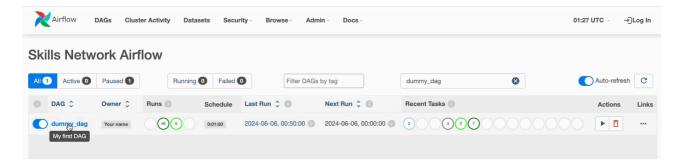



2. You will land on a DAG details page showing the default grid view with the three tasks listed.

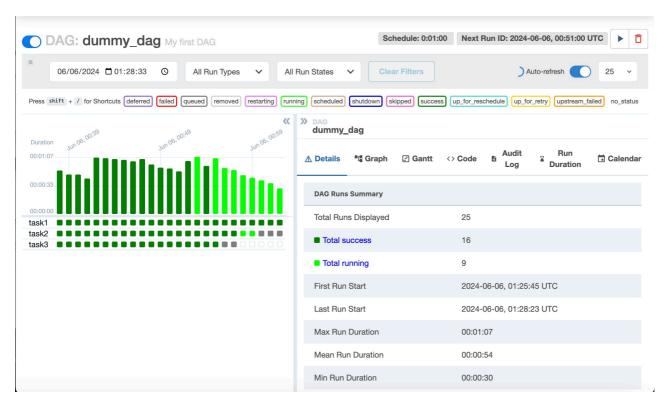

The Grid view shows your DAG tasks in the form of grids as seen in the image. You will observe the Auto Refresh button switched on by default on the right corner.


The grids in the image represent a single DAG run and the color indicates the status of the DAG run. Place your mouse on any grid to see the details.

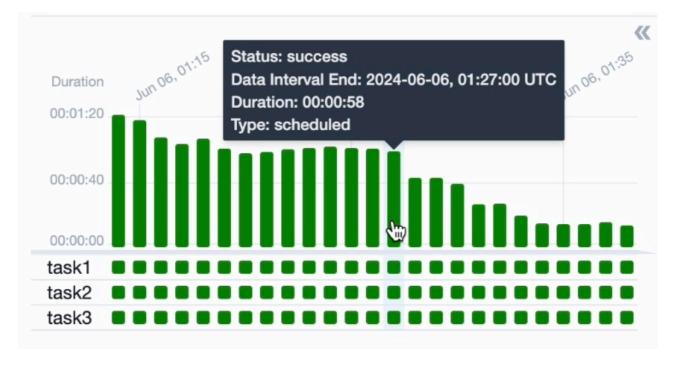

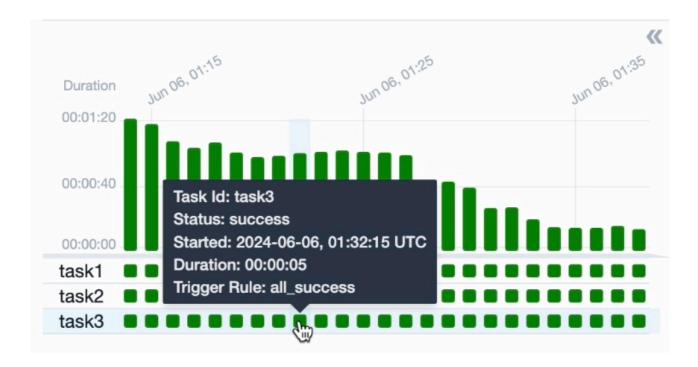


Exercise 7: Explore graph view of DAG

1. Click on the Graph View button to open the graph view. The graph view shows the tasks in a form of a graph. With the auto refresh on, each task status is also indicated with the color code.

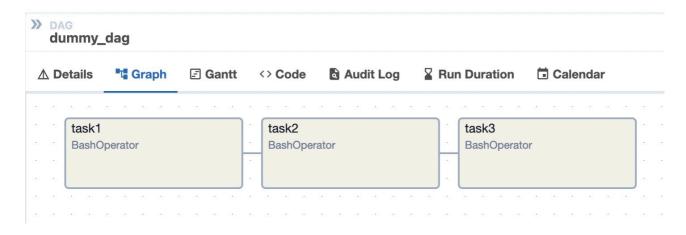


Exercise 8: Calender view

The calender view gives you an overview of all the dates when this DAG was run along with its status as a color code.

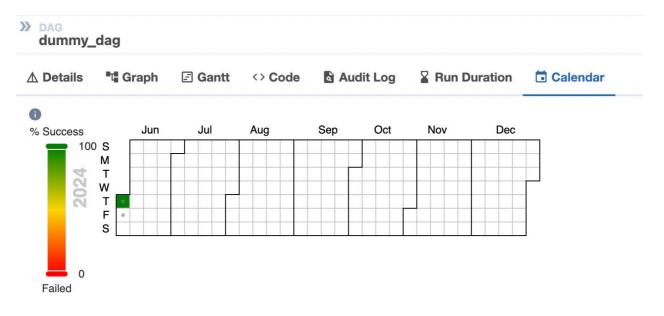


Exercise 9: DAG and Task Duration view

The DAG duration gives you an overview of how much time the entire workflow took.

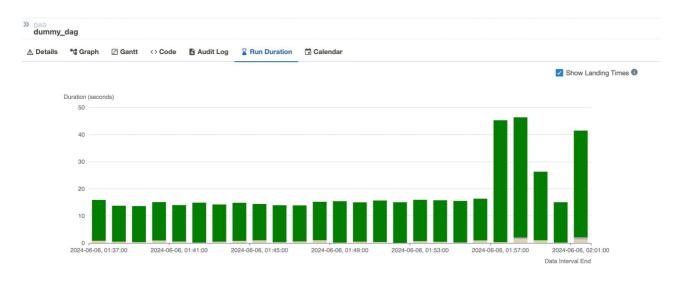


The Task Duration view gives you an overview of how much time each task took to execute, over a period of time.

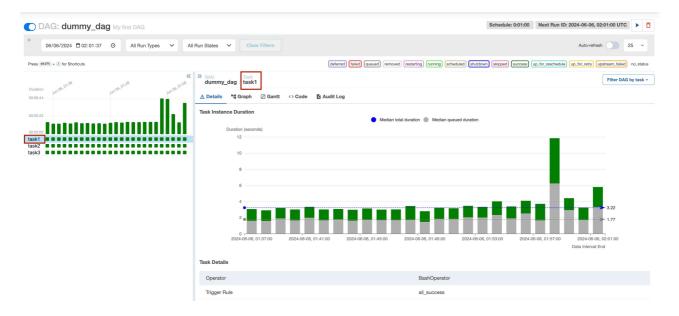


Exercise 10: Details view

The Details view give you all the details of the DAG as specified in the code of the DAG.

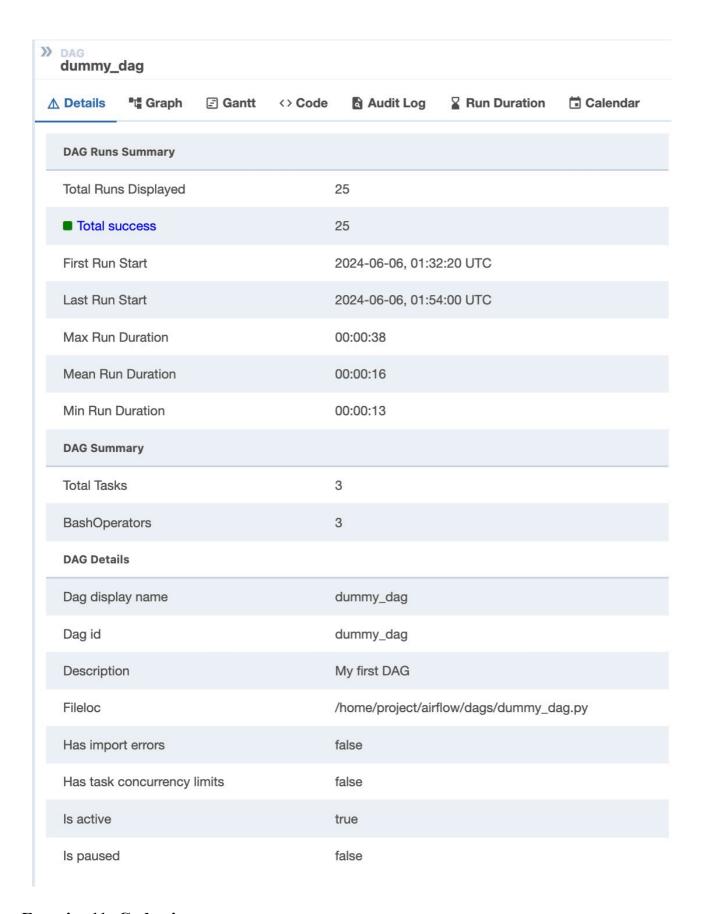


Exercise 11: Code view

The Code view lets you view the code of the DAG.

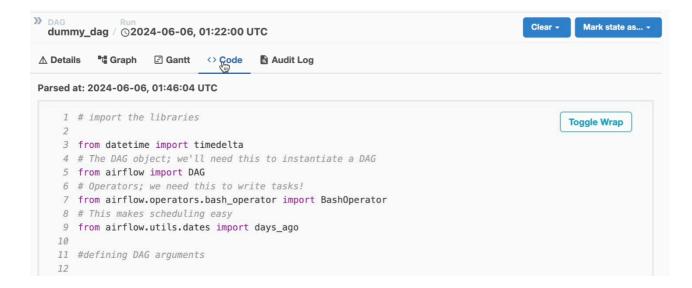


Exercise 12: Task logs

You can view the logs of an individual task with task logs.

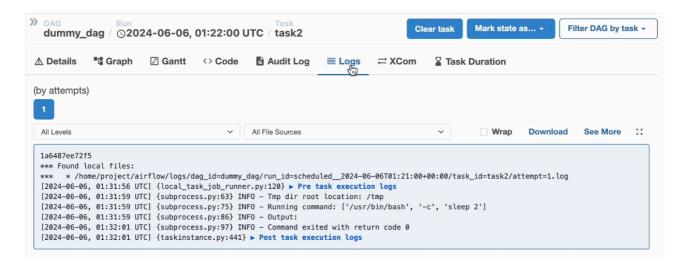


Exercise 13: Delete a DAG

To delete a DAG click on the delete button.

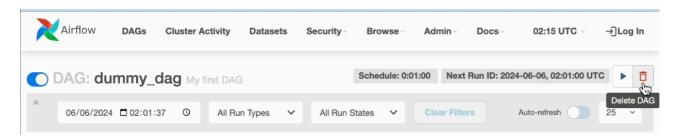

You will get a confirmation pop up as shown in the image below. Click OK to delete the DAG.

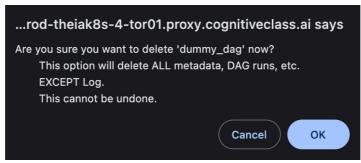

- 1. Unpause any existing DAG and monitor it.
- 2. View the details on any existing DAG. View the code of the DAG. Delve into the task details and view the logs of each task.

Authors

<u>Lavanya T S</u> Ramesh Sannareddy

Other Contributors

Rav Ahuja

 ${\hbox{\ensuremath{\mathbb{C}}}}$ IBM Corporation. All rights reserved.